


Diagnosis Temperature-Pressure

Compressor type	Variable Displacement (internally contr'd)
Expansion Device	Expansion Valve
Pressure High Side	Too low (see gauge)
Pressure Low Side	Too low (see gauge)
Temperature suction line	No cooling: warm Some cooling: cold
Complaint	No or little cooling

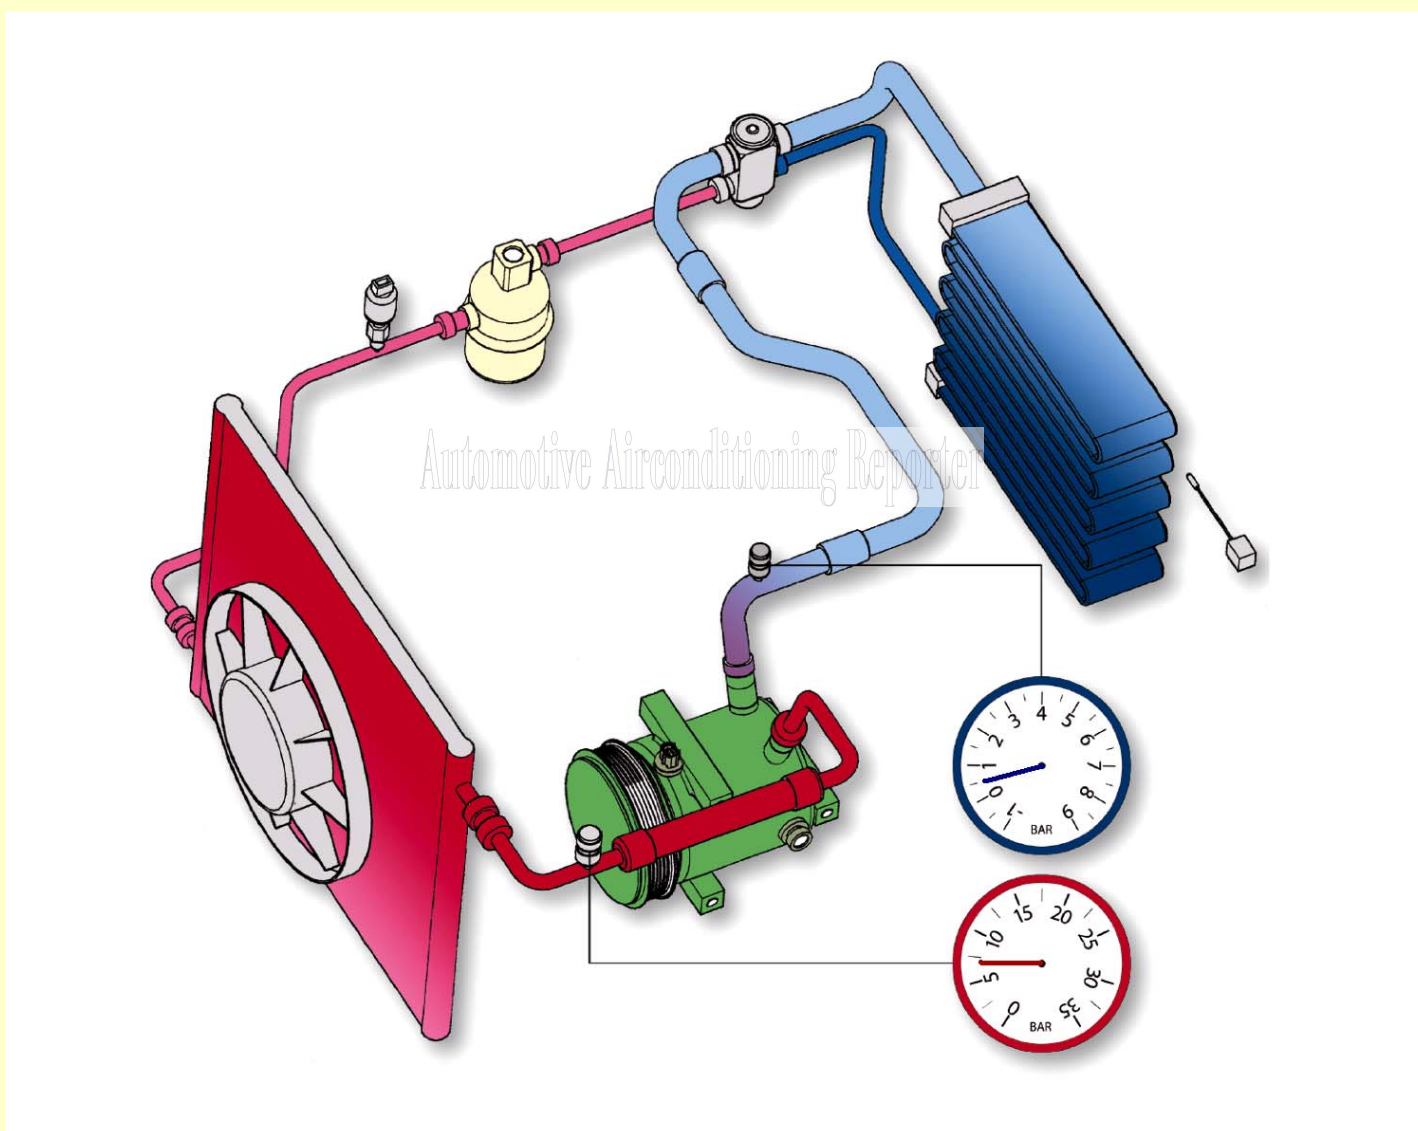

Possible causes:

- **Warm suction line: system contains little refrigerant, if not near to empty**
- **Cold suction line: partly plugged system (e.g. dryer, expansion valve)**